


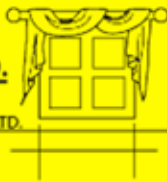

BUDGET BLINDS MFG. LTD.

Since 1992

CLEMENT L Draperies LTD.



THE ORIGINAL

**BUDGET BLINDS
OF EDMONTON**



TEL. (780)448-6030

TEL. (780)448-1080

Measuring Tips Blinds (horizontal) and Shades

Measure each window separately, as sizes may vary slightly (or greatly).

Use a metal measuring tape. (Cloth tapes may stretch.)

Round measurements to the nearest one-eighth (1/8) of an inch.

Record measurements clearly, indicating which is the width, and which is the height. It's a common mistake to switch the two measurements.

- 1.) *Decide whether to mount the treatment inside or outside the window frame.*

Inside Mount


Shade or blind will be mounted (recessed) inside the window frame.

This is the most common mount for shades and horizontal blinds.

Outside Mount

Shade or blind will be mounted on the outside of the window frame.


- 2.) *Follow directions to measure for either inside mount or outside mount.*

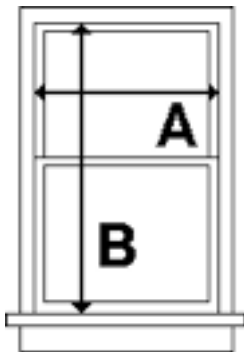

i) inside mount

A inside width

B inside height

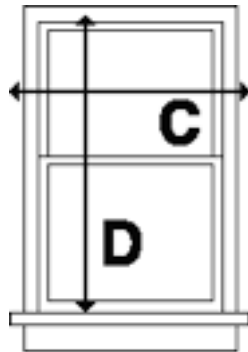

ii) outside mount

C outside width

D outside height

i) Measuring the Inside Mount

Measure and record the width, length, and depth.

Width for Inside Mount

Measure the width (A) of the opening. Because not all windows are exactly "square," measure the width in three places: high, middle, and low. Record the shortest width.

Record the width: _____ inches to the nearest 1/8".
Order this width.

NOTE: Don't be surprised if your window is out-of-square. It probably isn't noticeable if it is off a little. However, if there is a considerable difference, you may want to use an outside mount, rather than an inside one, to hide the imperfection.

Length for Inside Mount

Measure the length (B) from the top (inside the window casing) to the desired length (usually the windowsill).

Record the length: _____ inches to the nearest 1/8".
Order this length.

Depth for Inside Mount

If you would like the headrail (mechanism that raises and lowers the blind or shade) of your treatment to be flush with the window frame, it is important to consider the depth of the window frame, as well as, the product you're interested in purchasing.

Blinds and shades do not have to be flush with the window frame. However, if it is flush, it will have a more finished appearance and will not interfere with any other window treatments (such as curtains or draperies) you may be using in conjunction with the blind or shade.

Measure the depth of the window at the top where the headrail will be installed.

Record the depth: _____ inches to the nearest 1/8".
Order to accommodate this depth.

Be sure to compare this measurement with the depth of the product you'd like to purchase to verify its flush fit.



BUDGET BLINDS MFG. LTD.

Since 1992

CLEMENT L Draperies LTD.



THE ORIGINAL

**BUDGET BLINDS
OF EDMONTON**



TEL. (780)448-6030

TEL. (780)448-1080

ii) Measuring the Outside Mount

Measure and record the width and length.

Width for Outside Mount

Measure the width (C) of the area to be covered, where the headrail (mechanism that raises and lowers the blind or shade) will be installed. Consider how far you'd like the treatment to extend beyond the window frame on each side. Generally, the recommended overlap is at least 1 inches on each side of the window. For Roman and roll-up shades allow at least 2 inches on each side.

Record the desired width: _____ inches to the nearest 1/8".
Order this width.

Length for Outside Mount

Measure the length (D) in three different places: from the top right, top left, and top center of the window to the desired length (typically this is to the windowsill or floor). Use the longest measurement.

Add 3" for bracket installation above the opening/trim.

Record the desired length: _____ inches to the nearest 1/8".